




# PILE SPACING

## 32K and 40K 8 PILE

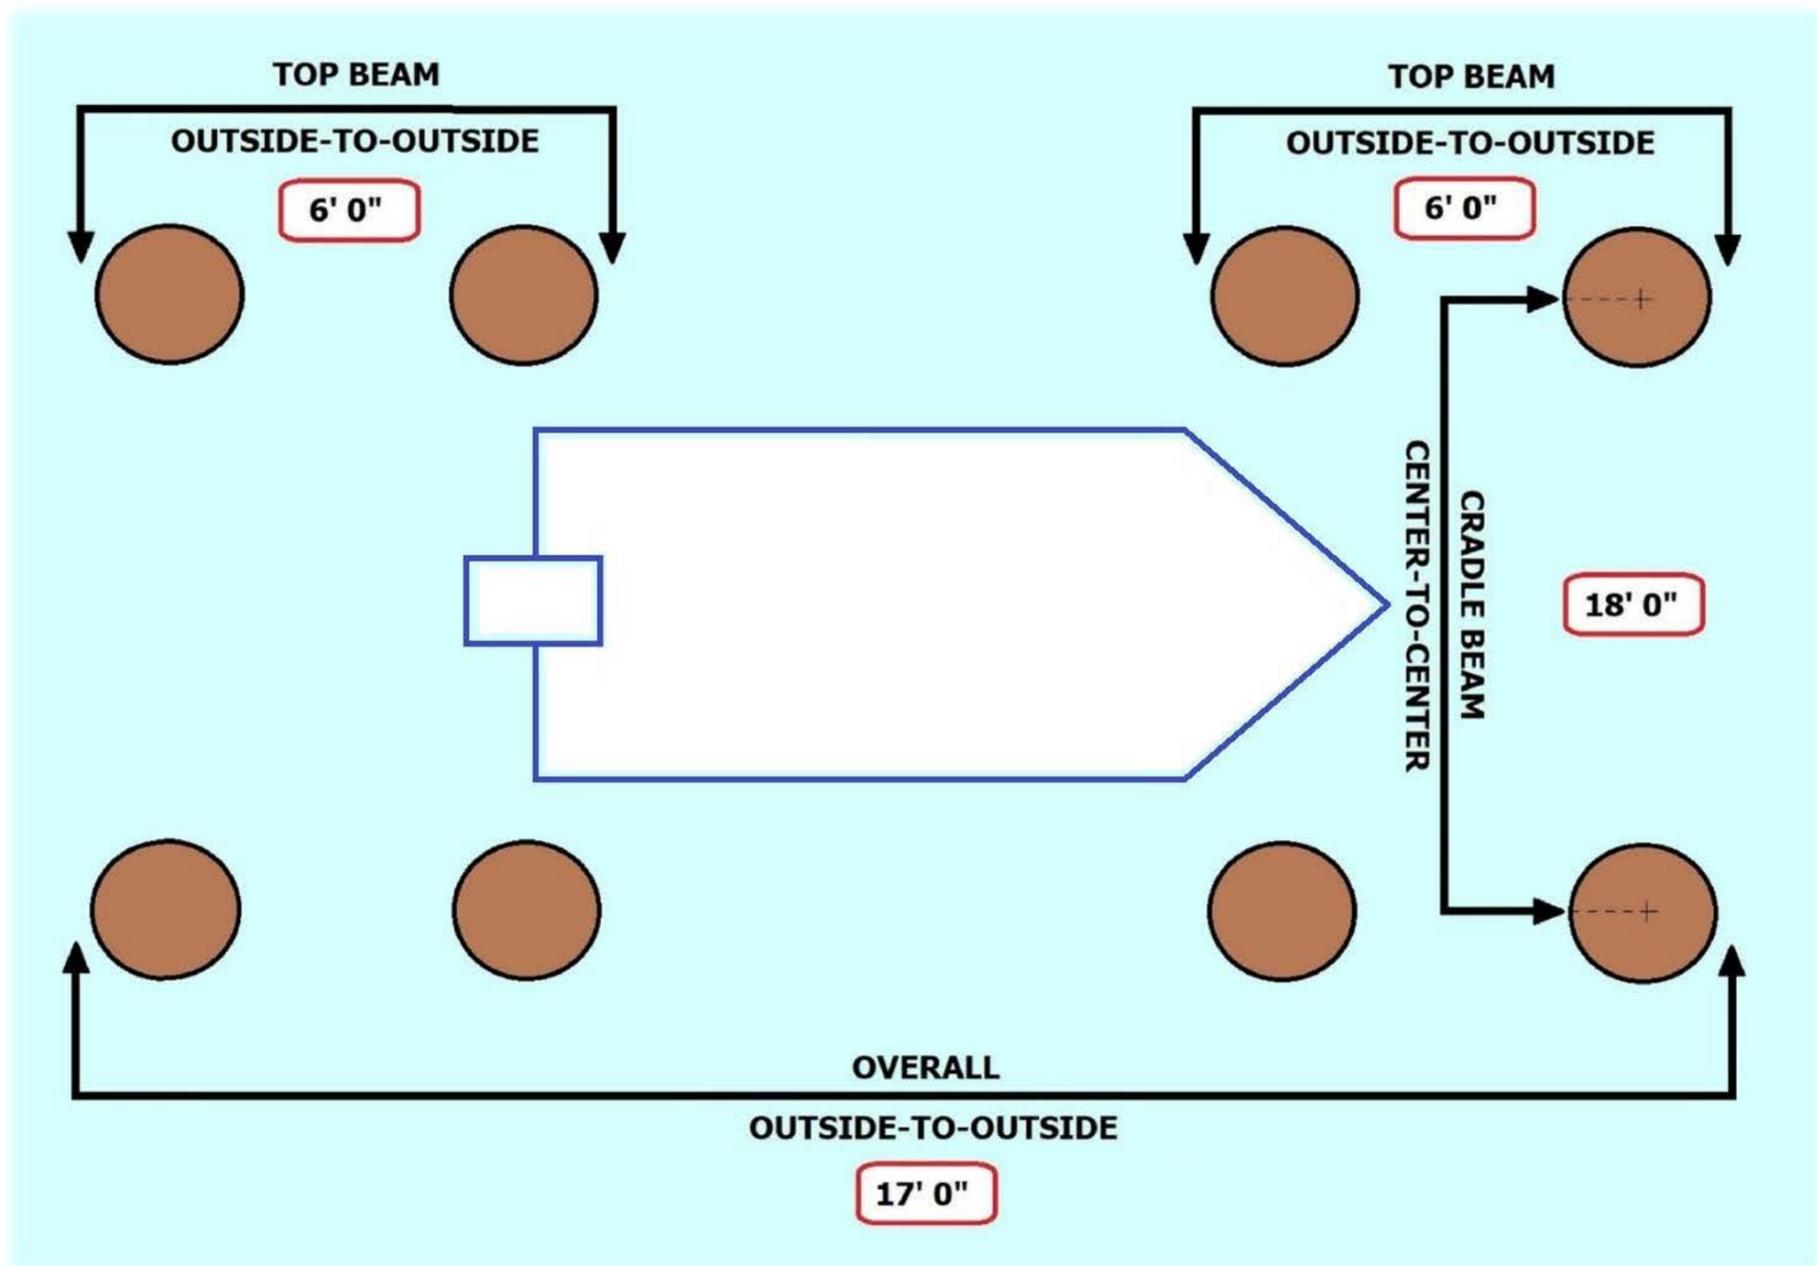

*Important: Vessel's weight must be centered on the boat lift.  
Verify proper balance by checking tension at each lift cable.*

[www.FixMarineSupply.com](http://www.FixMarineSupply.com)  
**1-866-998-3625**