


Greasing the Boat Lift

In addition to greasing the backplate, the drive pipes bearings also need to be greased. The grease zerts are located on the top of the bearing housings, in the top beam assemblies (figures c).

And on 10K thru 40K sized lifts the sheave housing's axle bolts also require lubrication (figure d.) These also should be greased at least twice a year.

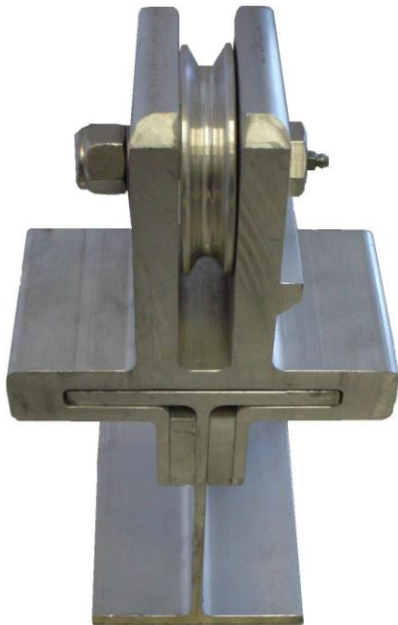

Note: Remember, there is drive pipe bearing grease point located on the large 96 tooth worm gear on each of the backplates (figure a.)

