


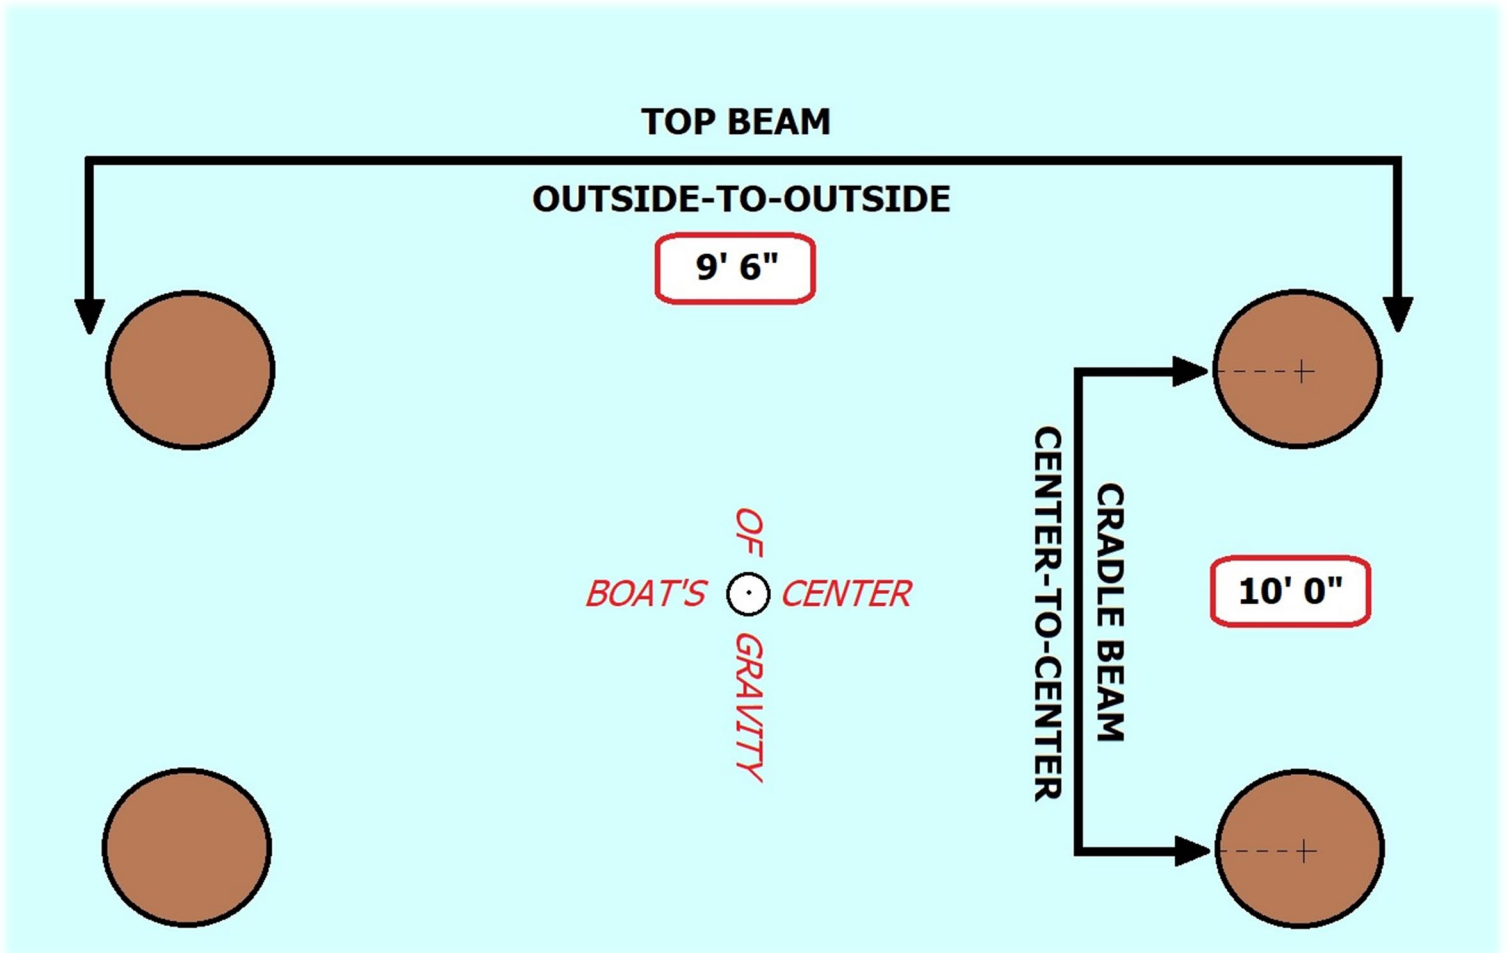

PILE SPACING

4.5K



*Important: Vessel's weight must be centered on the boat lift.
Verify proper balance by checking tension at each lift cable.*

www.FixMarineSupply.com

1-866-998-3625